



WATER CONDITIONING SYSTEM

CHLORAMINE SERIES

INSTALLATION
INSTRUCTIONS

WATER CONDITIONING SYSTEM CHLORAMINE SERIES INSTALLATION

Before you begin

Purearth2o Water Conditioning Systems are recommended to operate at a range of 45-65 PSI. Check your pressure regulator with a pressure gauge. If the pressure reading is above 65 PSI, replace the pressure regulator as needed.

The location of the Water Conditioning System should be level and located nearest the pressure regulator.

Before beginning the installation, turn off the main water supply valve and open a faucet to drain down the water in the pipes. (Turn off recirculating pump, if any.)

Step 1



Solder the brass adapter to the copper pipe. Allow the fitting to cool.

Step 3



Install the bypass valve onto the filter valve fitting and tighten nuts (hand tightened ONLY - DO NOT use tools)

Step 2



After the fitting has cooled, slide the nut (black) on first, then the split ring (white), and finally the O-ring (black).

Step 4



Cut and remove a section of the water supply lines where the system is going to be installed. Install the system after the pressure regulator. The location of the water conditioning system should be level and located nearest the pressure regulator.

WATER CONDITIONING SYSTEM CHLORAMINE SERIES INSTALLATION

Step 5



Follow all state and federal plumbing codes when installing the drain line. Install an "air gap" at the end of the drain line. Do not connect directly to a sewer line.

Step 6



Install a ground strap. (Not included.) When installing a Purearth2o Water Conditioning System, the ground wire may be interrupted and therefore you must install a ground continuity strap.

Step 7



Installation of the Scalexpel Protection units will take place on the outlet side of supply pipe. Install units on a area of straight pipe, 20" long if possible. Secure with the supplied plastic fasteners. Install units from top to bottom.

Step 8



Turn on the inlet side of the bypass valve to service position. Do not turn on the outside of the bypass (should remain in bypass position.) Slowly fill the tank.

Step 9



When the tank is full of water, press and hold the Regen Button for 4 to 5 seconds so the system goes into backwash mode for 10 minutes. It is recommended to backwash twice.

Open outlet side of bypass valve. Check the entire installation for leaks. Turn on the hot water recirculation pump and water heater, then run all faucets and valves to remove any air trapped in the water lines.

Press the Set Clock Button to reset the time of day (refer to the programming guide if needed.)

Installation is now complete!


Need Help?

If you have any questions about installation, please contact us.

Email: sales@purearth2o.com

Phone: (888) 614-4483

WATER CONDITIONING SYSTEM CHLORAMINE SERIES ROUGH-IN SPECIFICATIONS

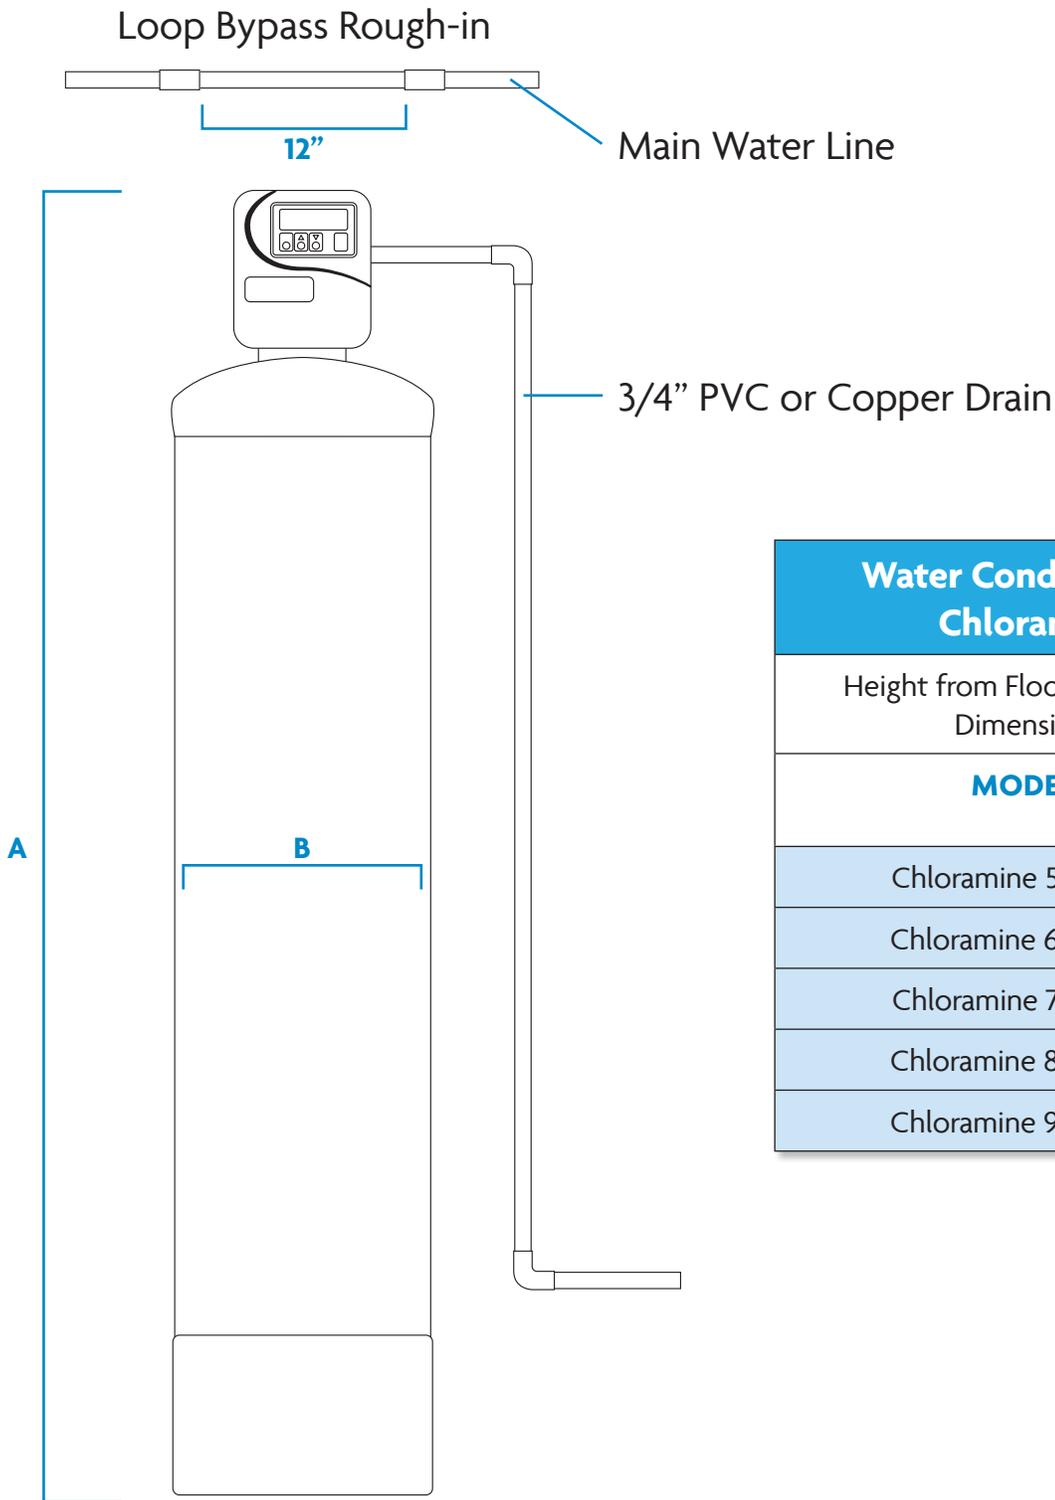

Water Conditioning System Chloramine Series		
Height from Floor to Rough-in Copper Dimensions in Inches		
MODELS	A (height)	B (width)
Chloramine 500	58"	10"
Chloramine 600	64"	11"
Chloramine 700	62"	13"
Chloramine 800	64"	14"
Chloramine 900	70"	16"



3231 Business Park Dr, Suite C-228
Vista, CA, 92081

Tel: toll-free **888-614-4483**
Fax: toll-free **888-886-3240**

www.purearth2o.com
sales@purearth2o.com

